

MS-4412B/MS-4424B FIRE ALARM SYSTEM

Operating Instructions

NORMAL - Only the GREEN A.C. POWER LED is on.
All other LEDs are off.

PANEL KEY - The key to open the panel can be found at this location.

WHEN AUDIBLE DEVICES ARE SOUNDING

FOR AN ALARM

1. Evacuate the protected area.
2. Notify the monitoring service and/or the Fire Department immediately. Tell them briefly what happened and what your current status is.

Phones: _____
Fire Department Monitoring Service

3. If the Fire Department is responding, be prepared to provide directions to arriving firefighters.

FOR TROUBLE ONLY

1. Notify the monitoring service and/or Fire Department if this panel is connected to either one, and tell them what is happening.
2. Silence audible devices by unlocking and opening the panel and pressing the TONE SILENCE switch. The yellow SYSTEM TROUBLE LED will remain on. Contact authorized service personnel immediately! (See Below)

WARNING

DO NOT ALLOW TROUBLE CONDITIONS TO REMAIN LOGGED IN THE SYSTEM. THE PROTECTION THAT THE SYSTEM OFFERS HAS BEEN COMPROMISED, OR ELIMINATED WHEN A TROUBLE CONDITION EXISTS.

To return to normal after an alarm-

1. Do not enter the protected area until safe to do so.
2. Clear all initiating devices. Smoke detectors will not reset if there is still smoke in the area.
3. Reset the control panel (PRESS the RESET switch).

Power failure or brownout -

If AC power drops too low or fails, the POWER ON LED will go out, the SYSTEM TROUBLE LED will turn on and the panel buzzer and any other audible trouble devices will sound. Contact authorized service personnel immediately. See below.

Sprinkler Supervisory -

Tone Silence will silence the piezo and cause the supervisory LED to illuminate steadily.

Manual Activation (Fire Drill or otherwise) -

Notification Appliance Circuits can be activated by pressing the ALARM ACTIVATE switch.

NOTE: You may want to disconnect the municipal box by sliding the DISCONNECT switch, located on the 4XTMF module, to its DOWN position.

Alarm Silencing -

Notification Appliance Circuits may be silenced by pressing the ALARM SILENCE switch. The ALARM SILENCED LED will turn on. Subsequent alarms will reactivate circuits. Press the RESET switch to clear the 'silenced' condition.

NOTE: The ALARM SILENCE switch may be disabled by DIP switch selection (see manual).

To Test the Lamps -

Press and hold the RESET switch and check all the LEDs. Every one should be on as long as the RESET switch is held on. For more information, refer to the manual, P/N 15125. It is kept in the following location:



Fire-LITE® Alarms Inc.

In the event of trouble, contact the local Service Representative

Name: _____

Company: _____

Address: _____

Telephone Number: _____

**FRAME AND POST THESE INSTRUCTIONS
ADJACENT TO THE PANEL**