


Category: Addressable Panels
Subject: ES-50X/200X


Question: How do you program for AlarmNet communications in the ES-50X and ES-200X FACPs with FS-Tools?

Answer:

1. Go to Communicator Settings – then Central Station
 - a. This is where you choose your Supervision and how you are communication (whether its IP/Cell or IP/Cell ONLY)
 - b. If you are using IP, you must either have the DHCP Enabled or deselected and manually enter in your Local Area Network IP information

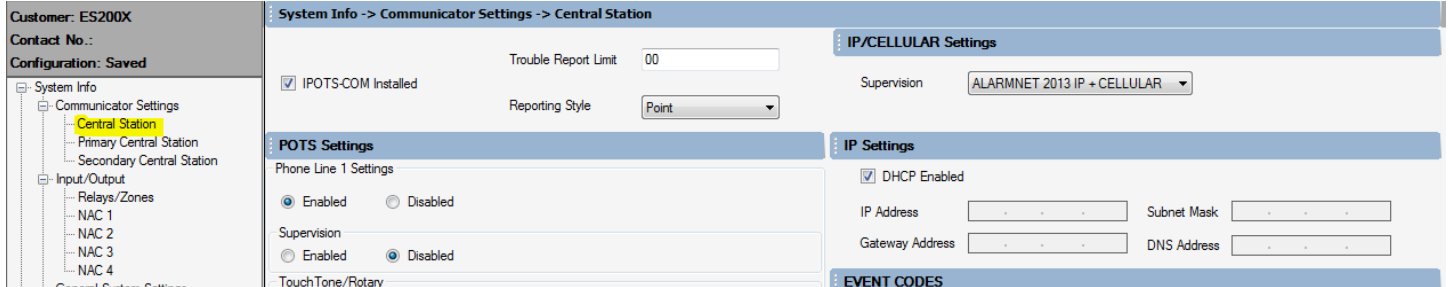

2. Proceed to Primary Central Station – and choose the correct Communication Path (this example I chose CELLULAR as the Primary)
 - a. Enter your AlarmNet Account Code, City ID and CS ID that you received from your AlarmNet Dealer

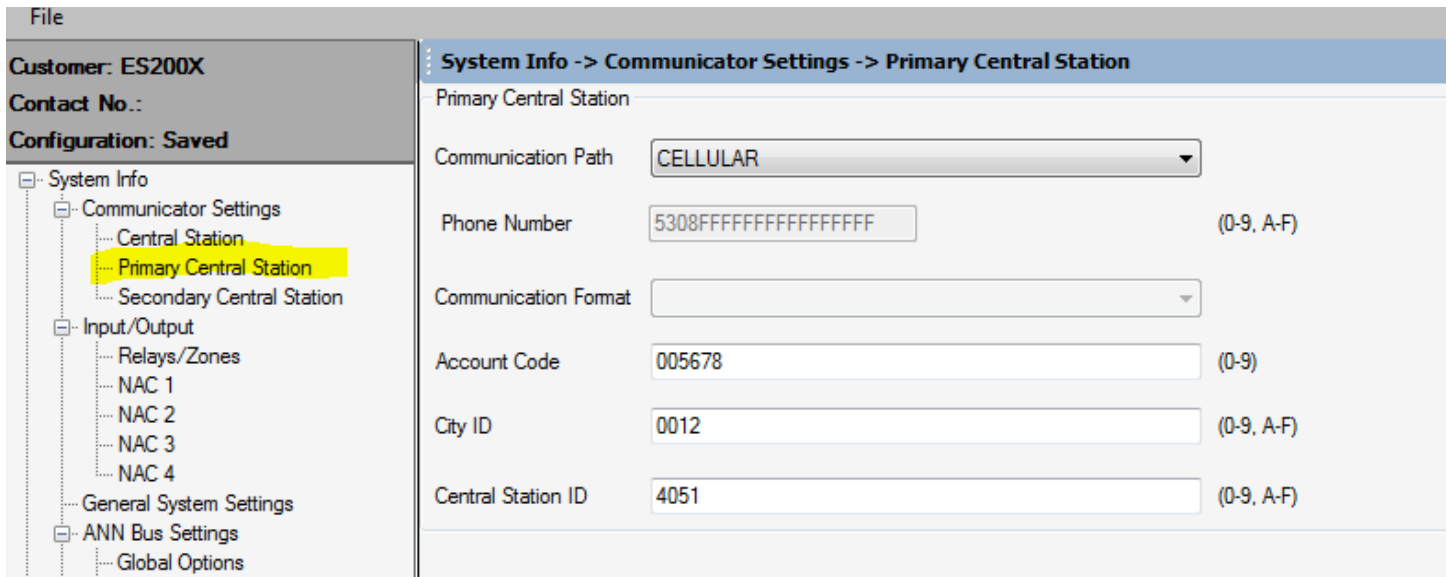

3. Proceed to Secondary Central Station – and choose the correct Communication Path (this example I chose Ethernet as the Secondary)
 - a. Enter your AlarmNet Account Code, City ID and CS ID that you received from your AlarmNet Dealer

