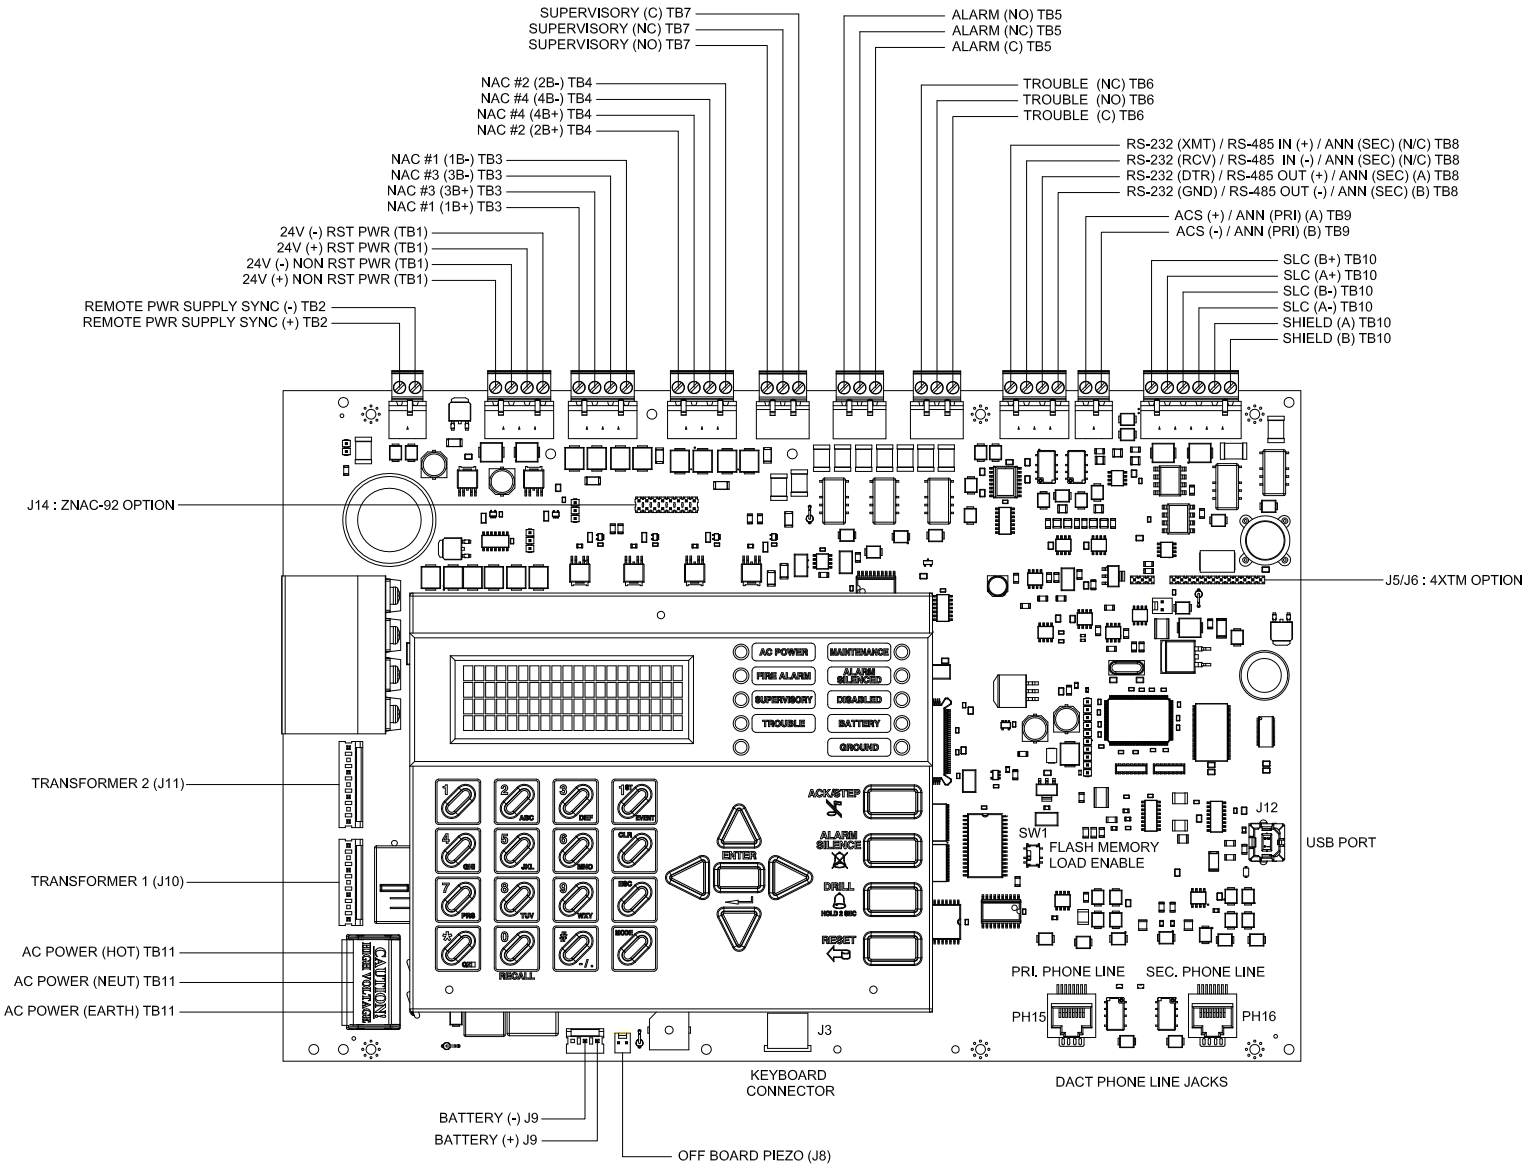
SUPERVISORY (C) TB7
SUPERVISORY (NC) TB7
SUPERVISORY (NO) TB7
ALARM (NO) TB5
ALARM (NC) TB5
ALARM (C) TB5
NAC #2 (2B-) TB4
NAC #4 (4B-) TB4
NAC #4 (4B+) TB4
NAC #2 (2B+) TB4
TROUBLE (NC) TB6
TROUBLE (NO) TB6
TROUBLE (C) TB6
NAC #1 (1B-) TB3
NAC #3 (3B-) TB3
NAC #3 (3B+) TB3
NAC #1 (1B+) TB3
RS-232 (XMT) / RS-485 IN (+) / ANN (SEC) (N/C) TB8
RS-232 (RCV) / RS-485 IN (-) / ANN (SEC) (N/C) TB8
RS-232 (DTR) / RS-485 OUT (+) / ANN (SEC) (A) TB8
RS-232 (GND) / RS-485 OUT (-) / ANN (SEC) (B) TB8
24V (-) RST PWR (TB1)
24V (+) RST PWR (TB1)
24V (-) NON RST PWR (TB1)
24V (+) NON RST PWR (TB1)
ACS (+) / ANN (PRI) (A) TB9
ACS (-) / ANN (PRI) (B) TB9
SLC (B+) TB10
SLC (A+) TB10
SLC (B-) TB10
SLC (A-) TB10
SHIELD (A) TB10
SHIELD (B) TB10
REMOTE PWR SUPPLY SYNC (-) TB2
REMOTE PWR SUPPLY SYNC (+) TB2
J14 : ZNAC-92 OPTION
J5/J6 : 4XTM OPTION
TRANSFORMER 2 (J11)
TRANSFORMER 1 (J10)
AC POWER (HOT) TB11
AC POWER (NEUT) TB11
AC POWER (EARTH) TB11
AC POWER
MAINTENANCE
FIRE ALARM
ALARM SILENCED
SUPERVISORY
DISABLED
TROUBLE
BATTERY
GROUND
ACK/STEP
ALARM SILENCE
DRILL
RESET
ENTER
RECALL
SW1
FLASH MEMORY LOAD ENABLE
J12
USB PORT
PRI. PHONE LINE
SEC. PHONE LINE
PH15
PH16
J3
KEYBOARD CONNECTOR
DACT PHONE LINE JACKS
BATTERY (-) J9
BATTERY (+) J9
OFF BOARD PIEZO (J8)