

## Kit 90172

Terminal Block Cover Kit for the  
CMP-24 & CGSL-2000  
Control Panels

Document 15139 Rev. A 11/24/92 ECN 90-255 P/N 15139:A1

### To install the Terminal Block Cover Kit:

- Remove and discard existing screw in terminal block as shown. (Figure 1)
- Snap terminal block cover into place on terminal block.
- Put plastic spacer into hole then insert plastic screw and fasten to terminal block. (Figure 2) *Do not overtighten!*

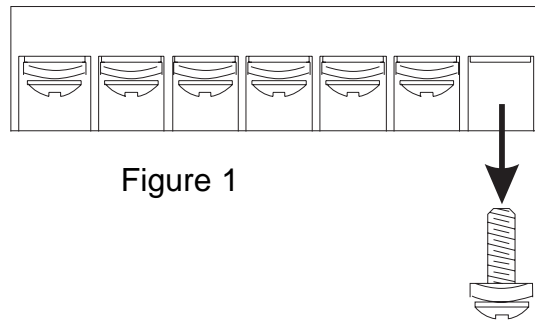


Figure 1

